


REQUIRED TOOLS

- 1/8" ALLEN KEY
- 9/16" WRENCH
- 5/32" ALLEN KEY
- RUBBER Mallet
- 3/16" ALLEN KEY


1. REMOVE ALL CONTENTS FROM THE BOX

2. LOCATE THE LOWER TUBE AND CHAIR BASE. INSTALL THE TUBE IN THE BASE. IF THE FITMENT IS TIGHT, USE A RUBBER Mallet TO SEAT THE TUBE IN THE BASE.

3. TIGHTEN THE PREINSTALLED SET SCREWS WITH A 1/8" ALLEN KEY.


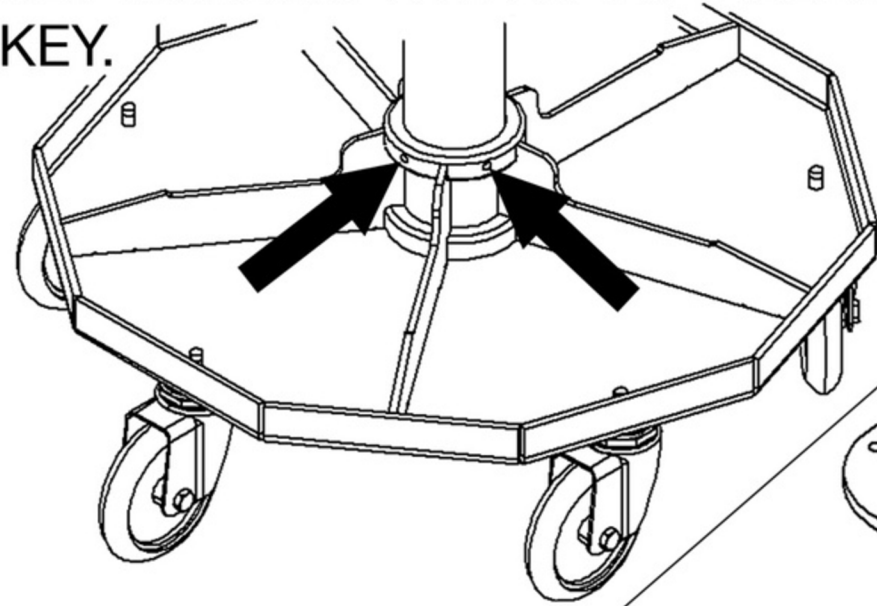


4. LOCATE THE ADJUSTMENT TUBE. WHILE PULLING THE LEVER UPWARDS, PLACE THE ADJUSTMENT TUBE INTO THE LOWER TUBE. BE SURE TO ALIGN THE SLOT ON THE ADJUSTMENT TUBE WITH THE HOLE ON THE LOWER TUBE AS SHOWN.

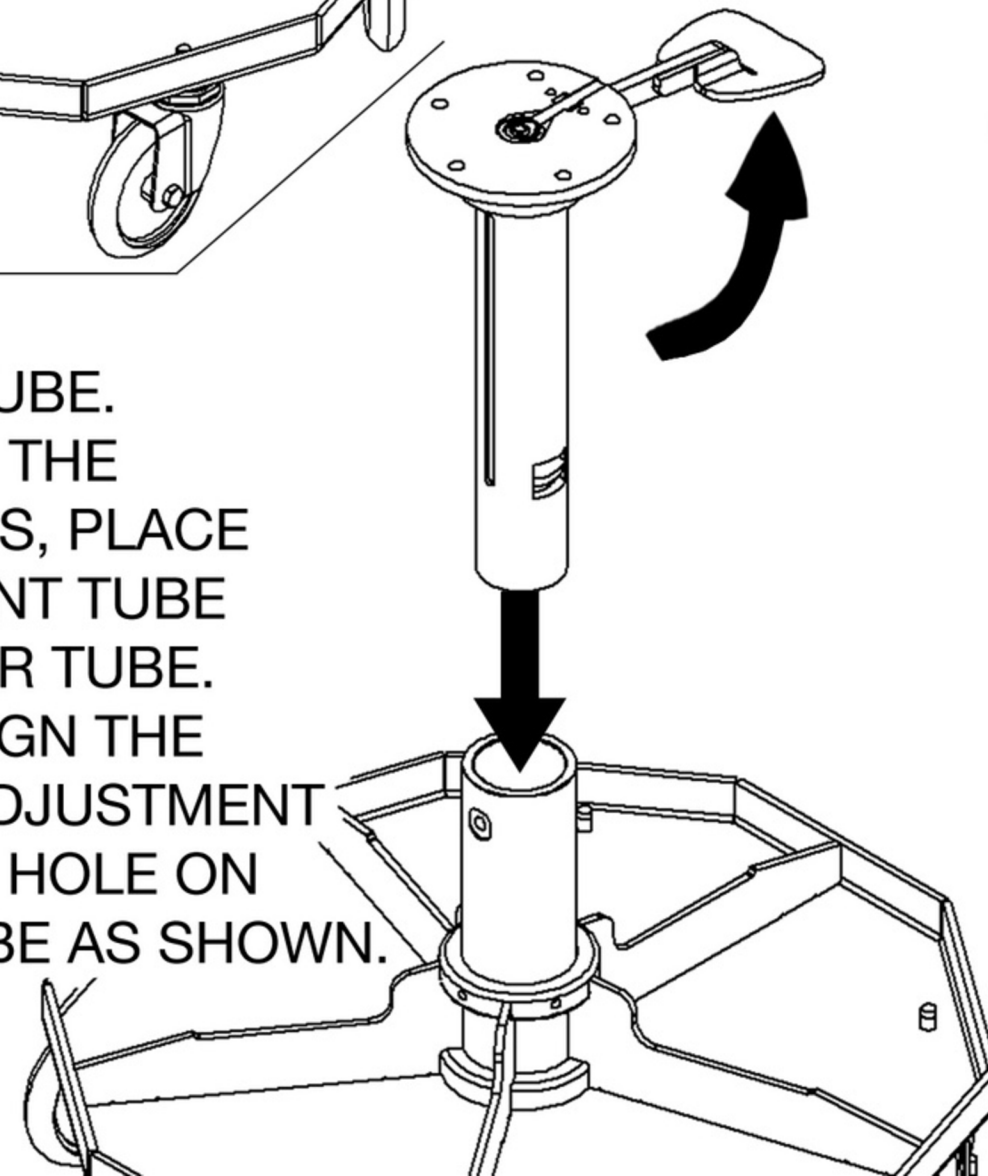


5. INSTALL THE DOG POINT SET SCREW BY TURNING IT IN WITH

A 3/16" ALLEN KEY, ENSURING THAT THE SET SCREW ENTERS THE LONG VERTICAL SLOT ON THE ADJUSTMENT TUBE. NEXT, SLIDE THE CHAIR ACTION TO THE TOP OF ITS STROKE AND LIGHTLY TIGHTEN THE SET SCREW, LOCKING THE ACTION IN PLACE. LOOSELY SPIN THE RETAINING NUT ONTO THE REMAINING THREADS.

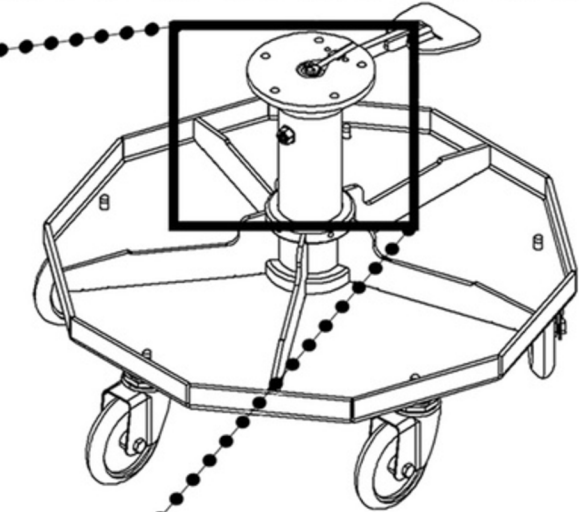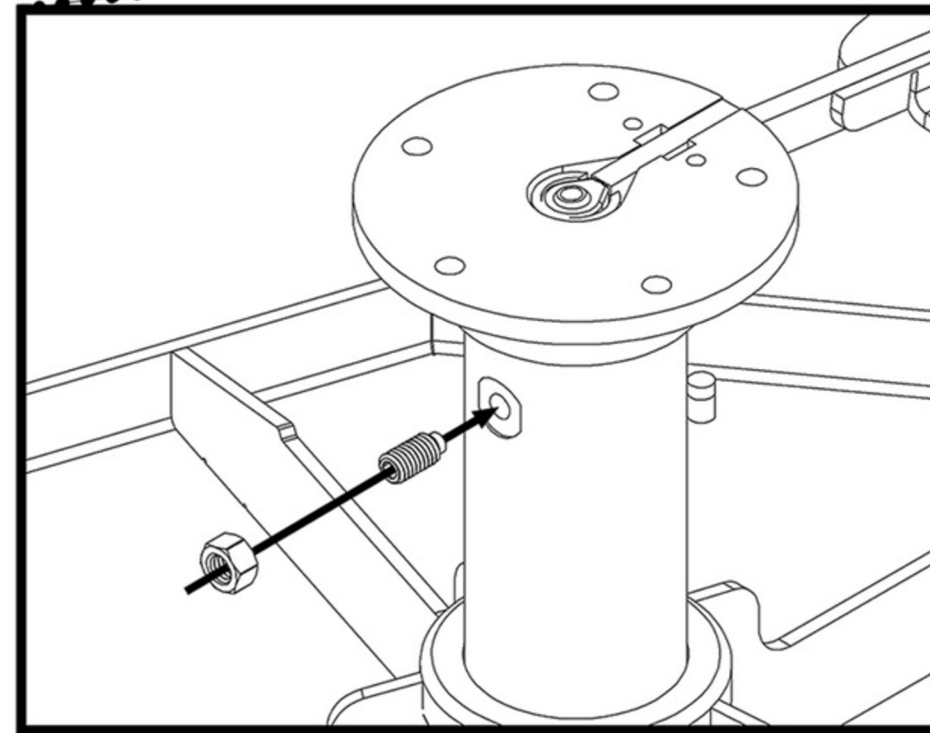

6. LOCATE THE MAIN CUSHION OF YOUR CHAIR. PLACE IT TOP DOWN ON THE EDGE OF CLEAN TABLE OR DESK.

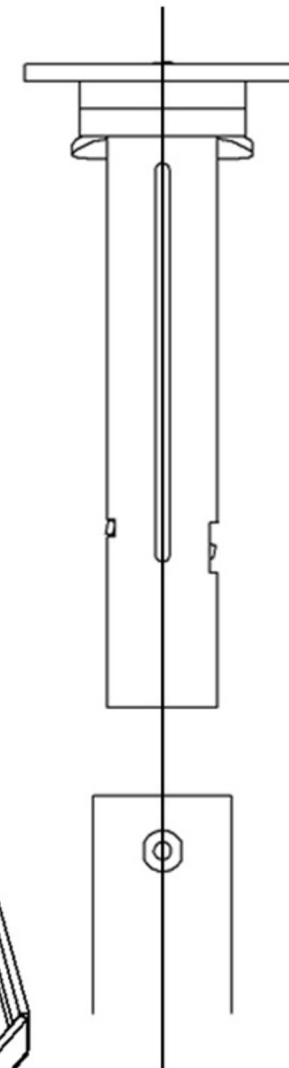


INSTRUCTIONS CONTINUED ON OPPOSITE SIDE ↗

7. IN THIS STEP YOU WILL UNDERSTAND AND CHOOSE WHERE TO MOUNT THE ADJUSTMENT HANDLE.


POSITION 1,2,3 AND 4 DENOTE THE MOUNTING POSITION OF ADDITIONAL OPTIONS. IF YOU HAVE PURCHASED FOUR OPTIONS, YOU WILL NEED TO MOUNT THE ADJUSTMENT HANDLE DIAGONAL TO THE OPTION POSITIONS AS SHOWN BELOW (A&B).

MAIN MOUNTING POSITIONS

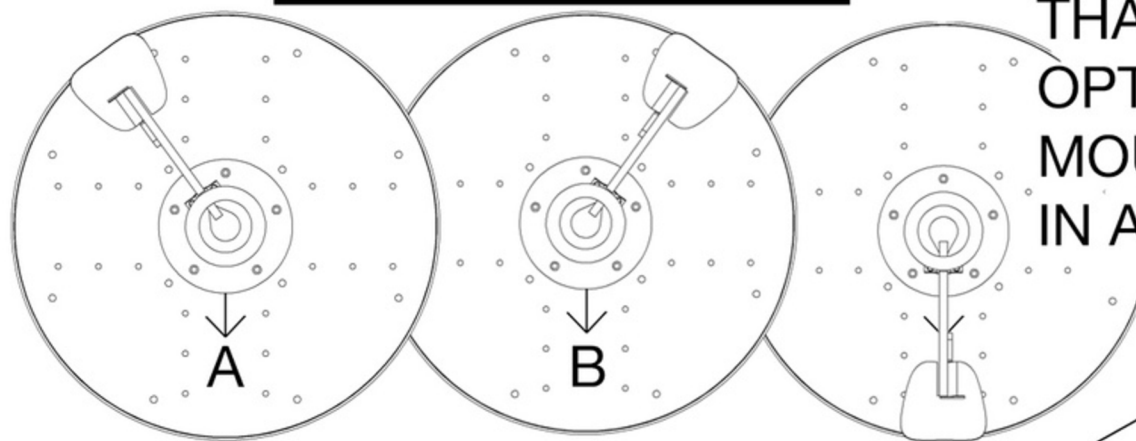

IF YOU HAVE LESS THAN 3 ADDITIONAL OPTIONS, YOU CAN MOUNT THE HANDLE IN ANY POSITION.

8. ONCE YOU HAVE CHOSEN YOUR ADJUSTMENT HANDLE LOCATION, YOU CAN INSTALL THE LOWER BASE ASSEMBLY ONTO THE MAIN CUSHION. WITH **TWO** PEOPLE, FLIP AND PLACE THE BASE ONTO THE CUSHION, SECURING IT WITH 5 SCREWS USING A 5/32" ALLEN KEY.

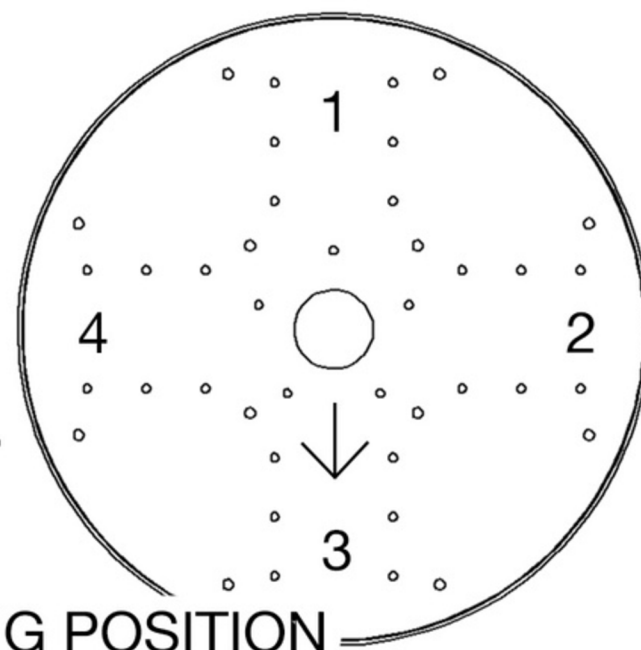

9. FASTEN OPTIONS TO THE BASE OF THE CHAIR WITH THE INCLUDED FASTNERS, USING A 5/32" ALLEN KEY. TO INSTALL TALLER OPTIONS SUCH AS THE BACKREST, POSITION THE PART OVER THE EDGE OF YOUR TABLE/BENCH.

10. ROTATE THE CHAIR TO ITS UPRIGHT POSITION AND PLACE IT ON THE GROUND. IF YOU HAVE A BACKREST, YOU CAN NOW SECURE THE BACKREST CUSHION WITH THE REMAINING THREE SCREWS USING A 5/32" ALLEN KEY.

11. LOCATE THE DOG POINT SET SCREW FROM **STEP 5**. USING YOUR 3/16" ALLEN KEY. LOOSENING THE SET SCREW BY A 1/4 TURN. NEXT, SNUG THE LOCKING NUT AGAINST THE LOWER TUBE, ENSURING THAT THE DOG POINT SET SCREW DOES NOT ROTATE.

12. YOUR CHAIR ASSEMBLY IS COMPLETE! BE SURE TO TEST THE ADJUSTABLE FUNCTION OF YOUR CHAIR, AND THE FUNCTION OF YOUR CASTOR WHEELS. IF YOU HAVE ANY ISSUES WITH THE FUNCTIONALITY OF THE CHAIR, BE SURE TO NOTIFY FAST FREDDY TO RESOLVE THE PROBLEM.

13. ENJOY YOUR NEW FASTFREDDY CHAIR.