

REQUIRED TOOLS

- 5/32" ALLEN KEY
- RUBBER Mallet

LOW-BOY / HIGH-BOY ASSEMBLY INSTRUCTIONS

1. REMOVE ALL CONTENTS FROM THE BOX




2. LOCATE THE MAIN CUSHION OF YOUR CHAIR. PLACE IT TOP DOWN ON THE EDGE OF CLEAN TABLE OR DESK.

3. LOCATE THE FOUR VERTICAL LEGS AND THE BAG OF SCREWS. FOR EACH LEG, INSERT TWO SCREWS THROUGH THE LEG AND INTO THE CUSHION AS SHOWN. BE SURE TO KEEP THE SCREWS **LOOSE TO ALLOW MOVEMENT FOR THE NEXT STEPS.**

WHEN ALL FOUR LEGS ARE ATTACHED TO THE SEAT, THE ASSEMBLY SHOULD LOOK SIMILAR TO THE IMAGE BELOW.


4. THREAD IN EIGHT MORE SCREWS AS SHOWN BELOW. BE SURE **NOT TO FULLY TIGHTEN THE SCREWS UNTIL ALL EIGHT SCREWS HAVE BEEN THREADED IN.**

5. TIGHTEN ALL OF THE LOOSE SCREWS FROM STEPS 3 AND 4 WITH A 5/32" ALLEN KEY.

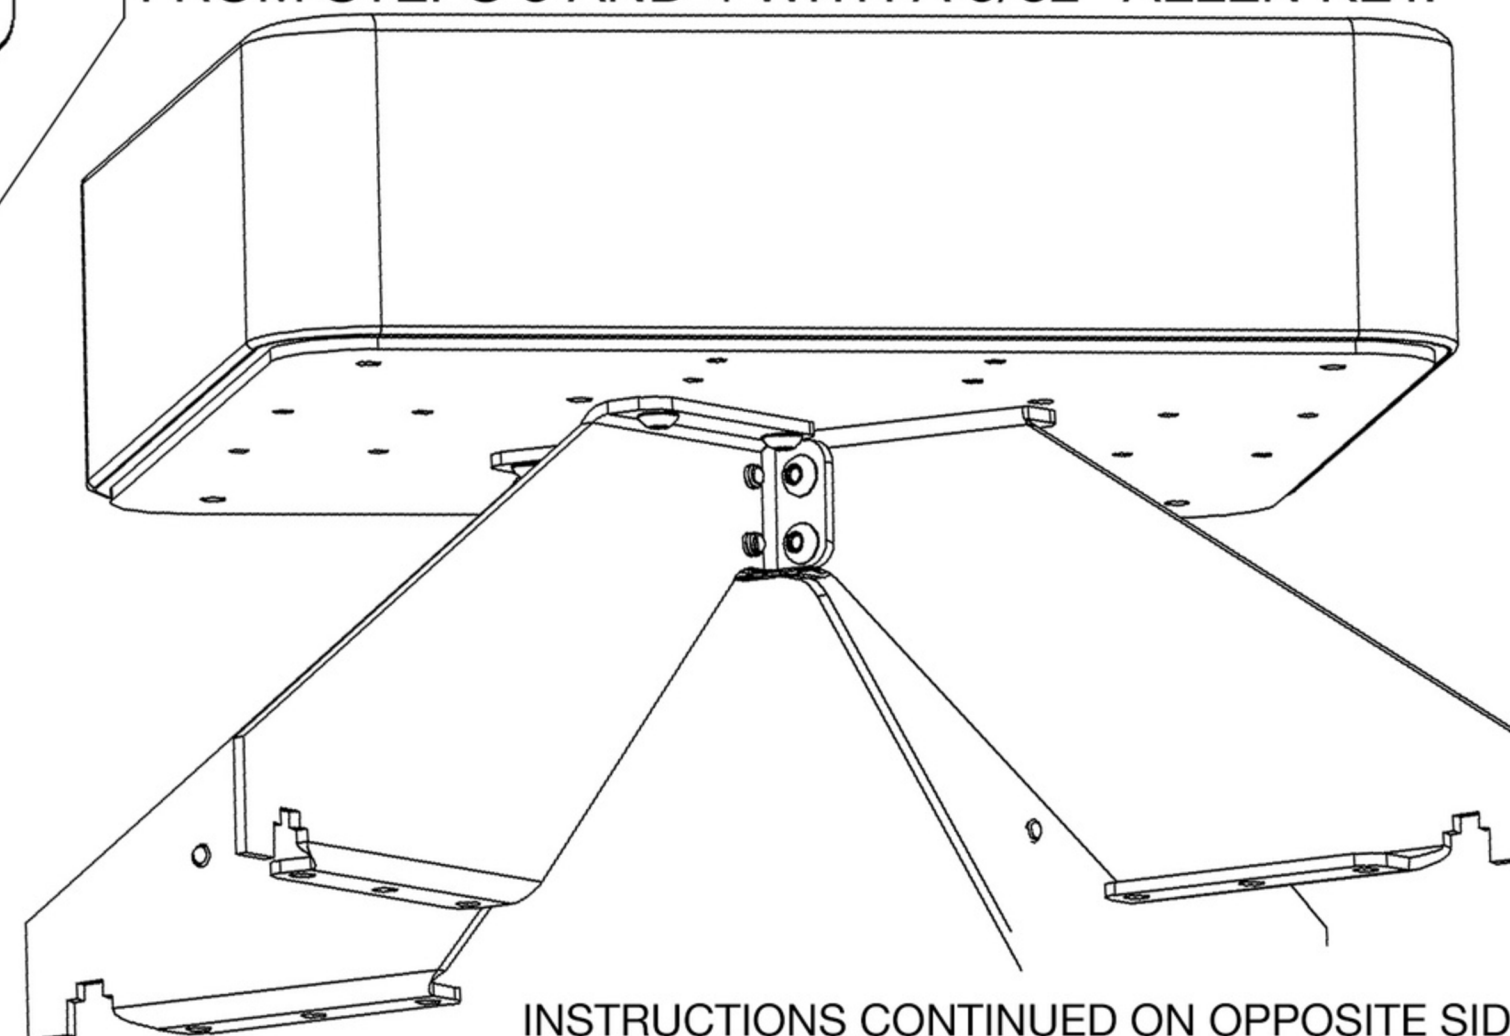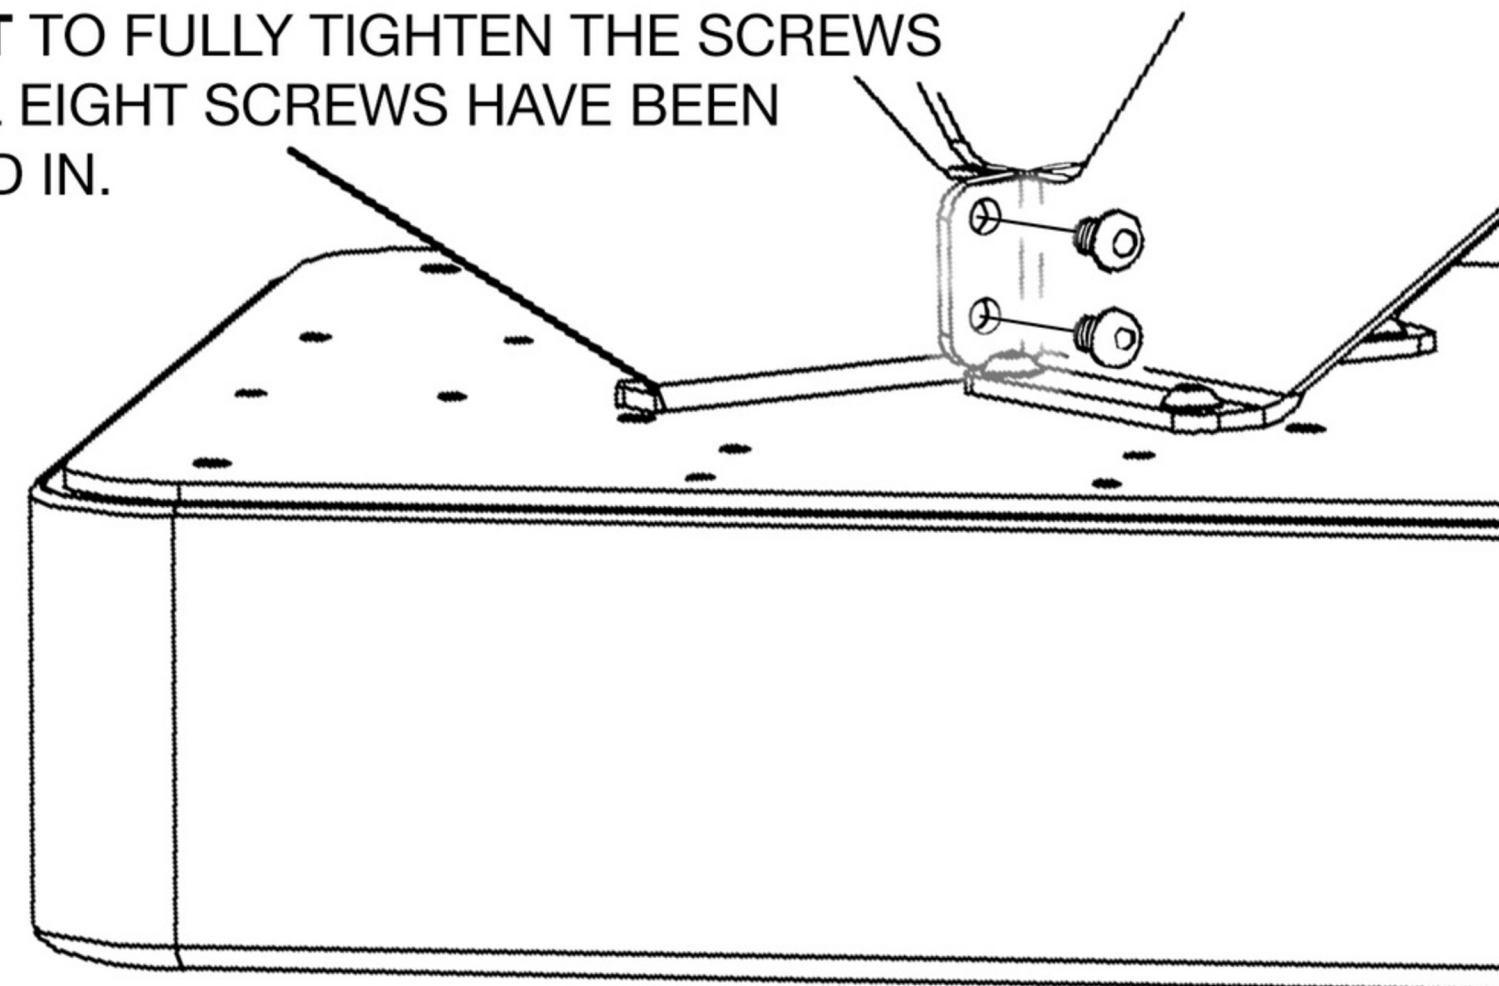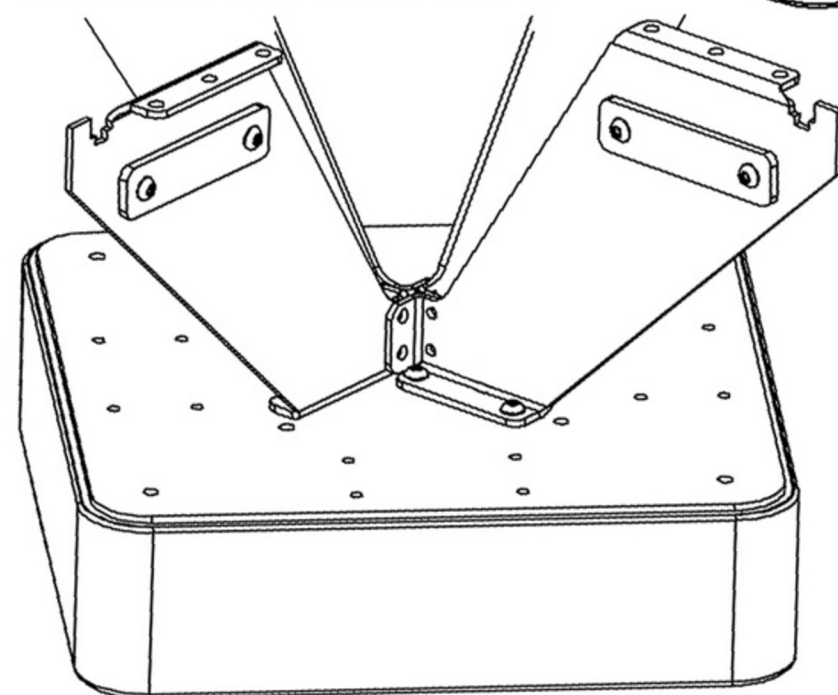


INSTRUCTIONS CONTINUED ON OPPOSITE SIDE ↪

6. FASTEN OPTIONS TO THE BASE OF THE CHAIR WITH THE INCLUDED FASTNERS, USING A 5/32" ALLEN KEY. TO INSTALL TALLER OPTIONS SUCH AS THE BACKREST, POSITION THE PART OVER THE EDGE OF YOUR TABLE/BENCH.

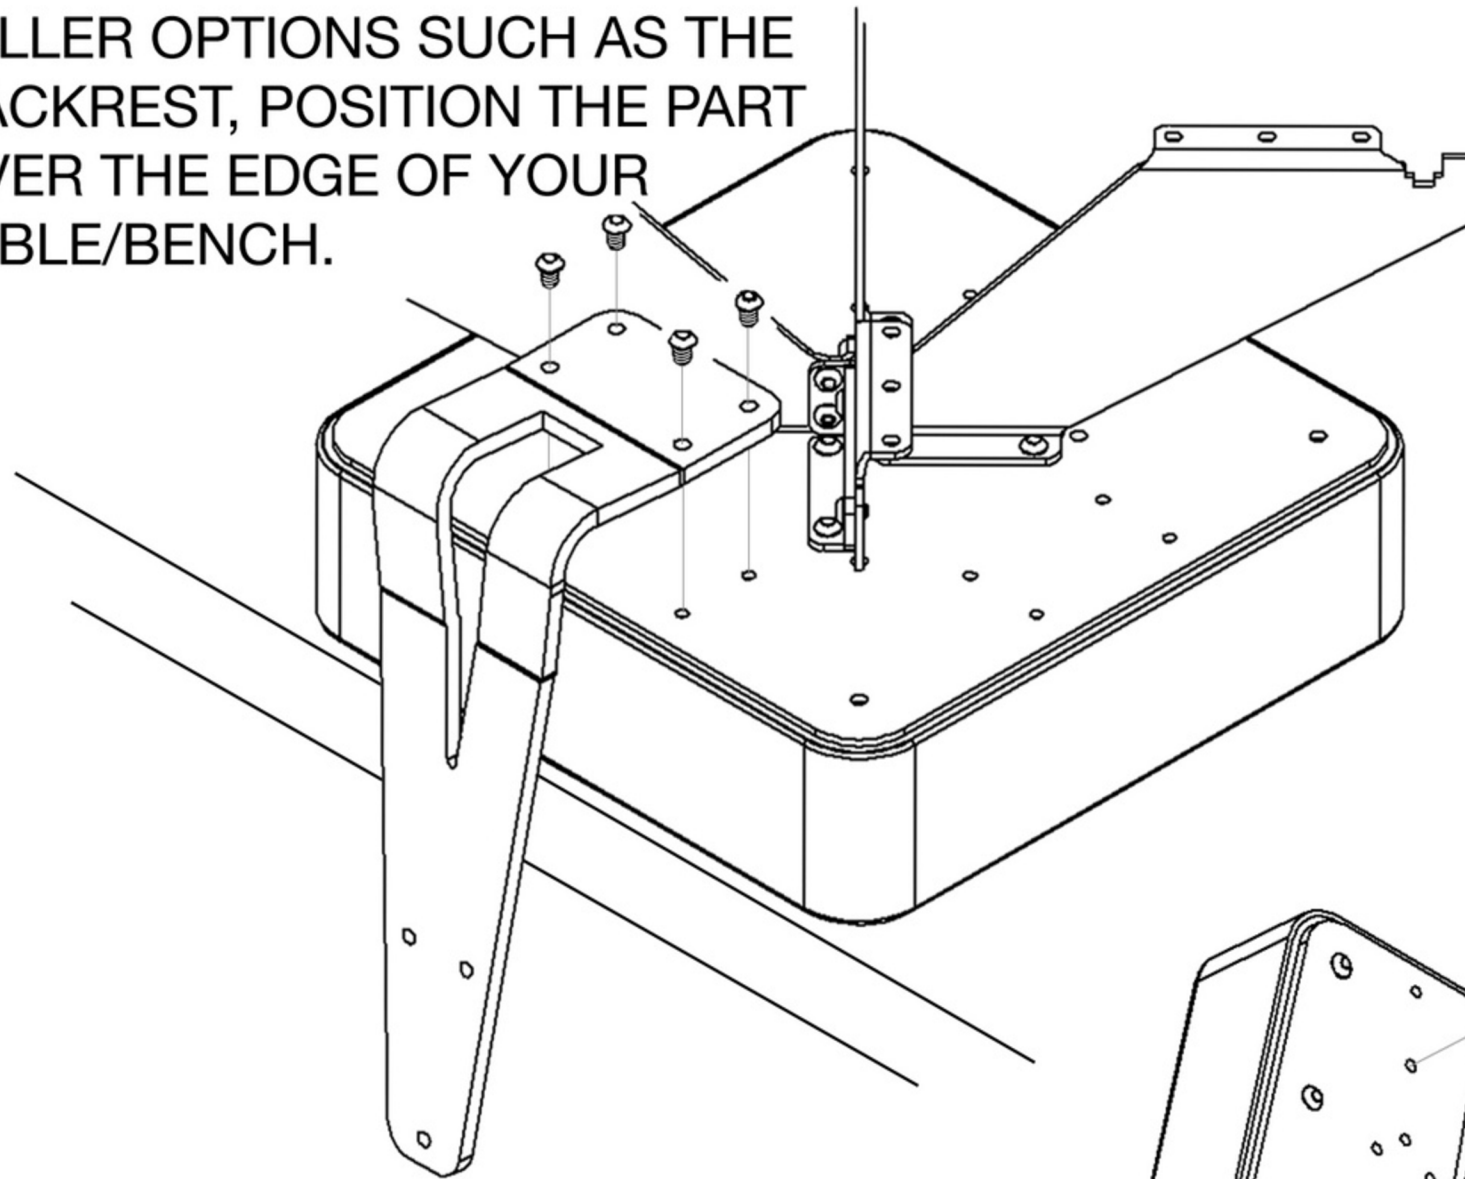


7. ROTATE THE CHAIR TO ITS UPRIGHT POSITION. IF YOU HAVE A BACKREST, YOU CAN NOW SECURE THE CUSHION TO THE SPINE WITH THE REMAINING THREE SCREWS USING A 5/32" ALLEN KEY.

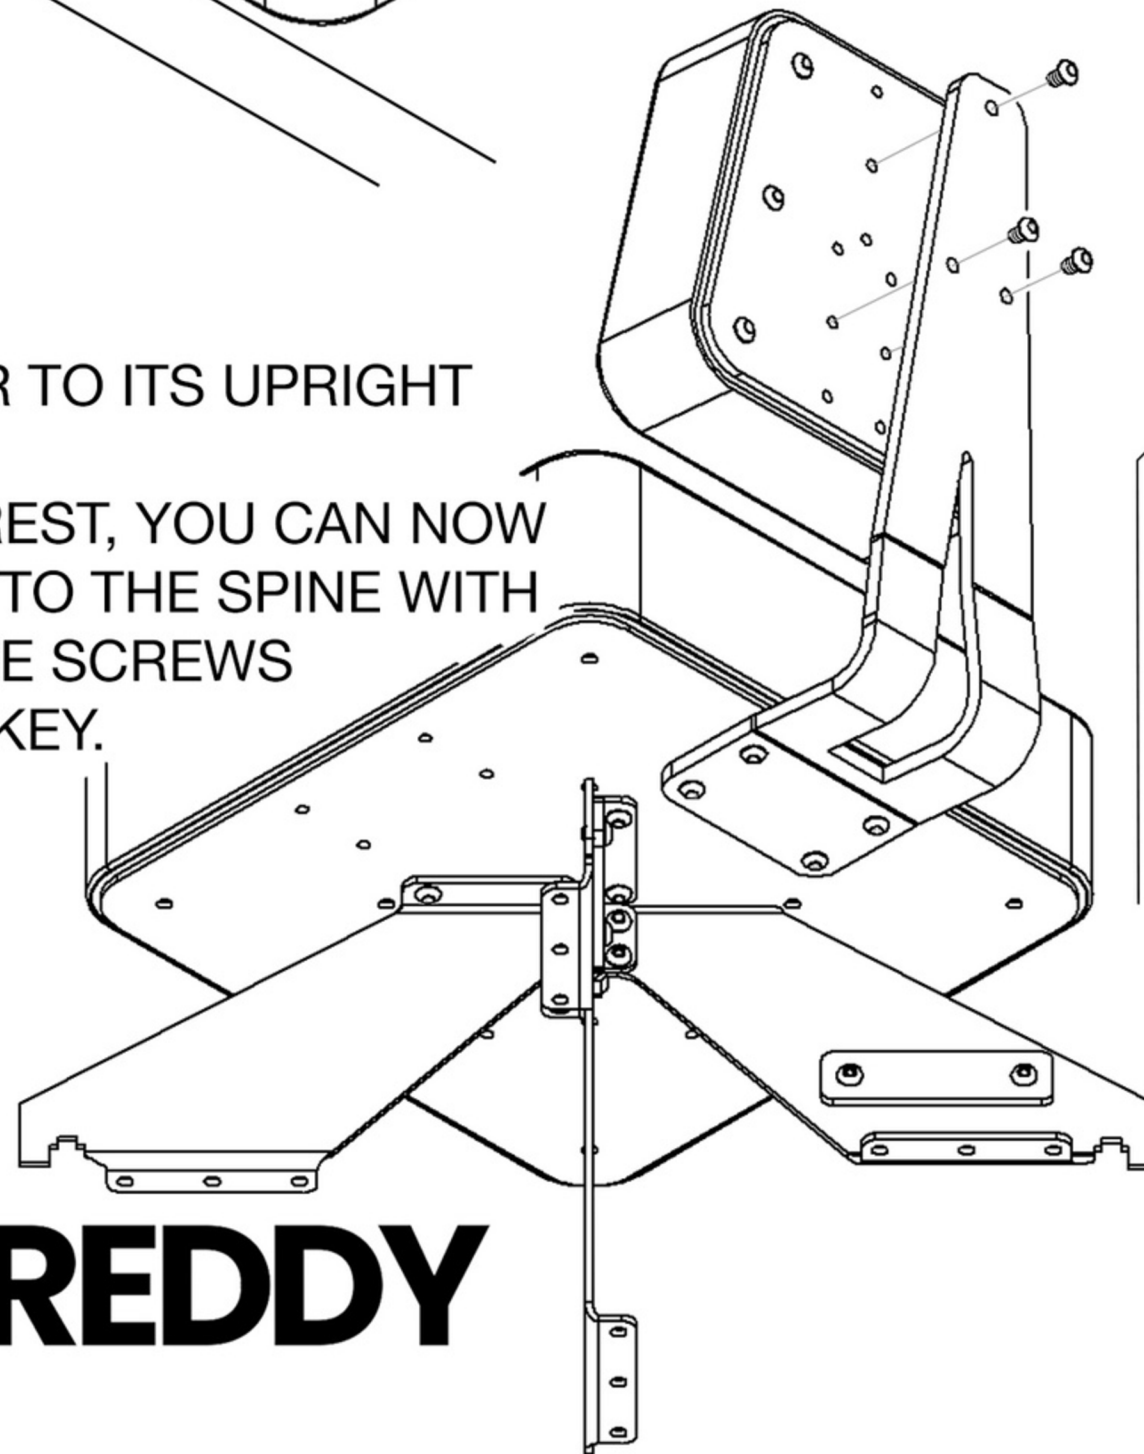

8. LOCATE THE CHAIR BASE. LIFT THE CHAIR-CUSHION ASSEMBLY ONTO THE CHAIR BASE.

THE CHAIR-CUSHION ASSEMBLY CAN BE A TIGHT FIT INTO THE CHAIR BASE. YOU MAY HAVE TO USE A RUBBER Mallet TO SEAT THE TWO ASSEMBLIES TOGETHER.

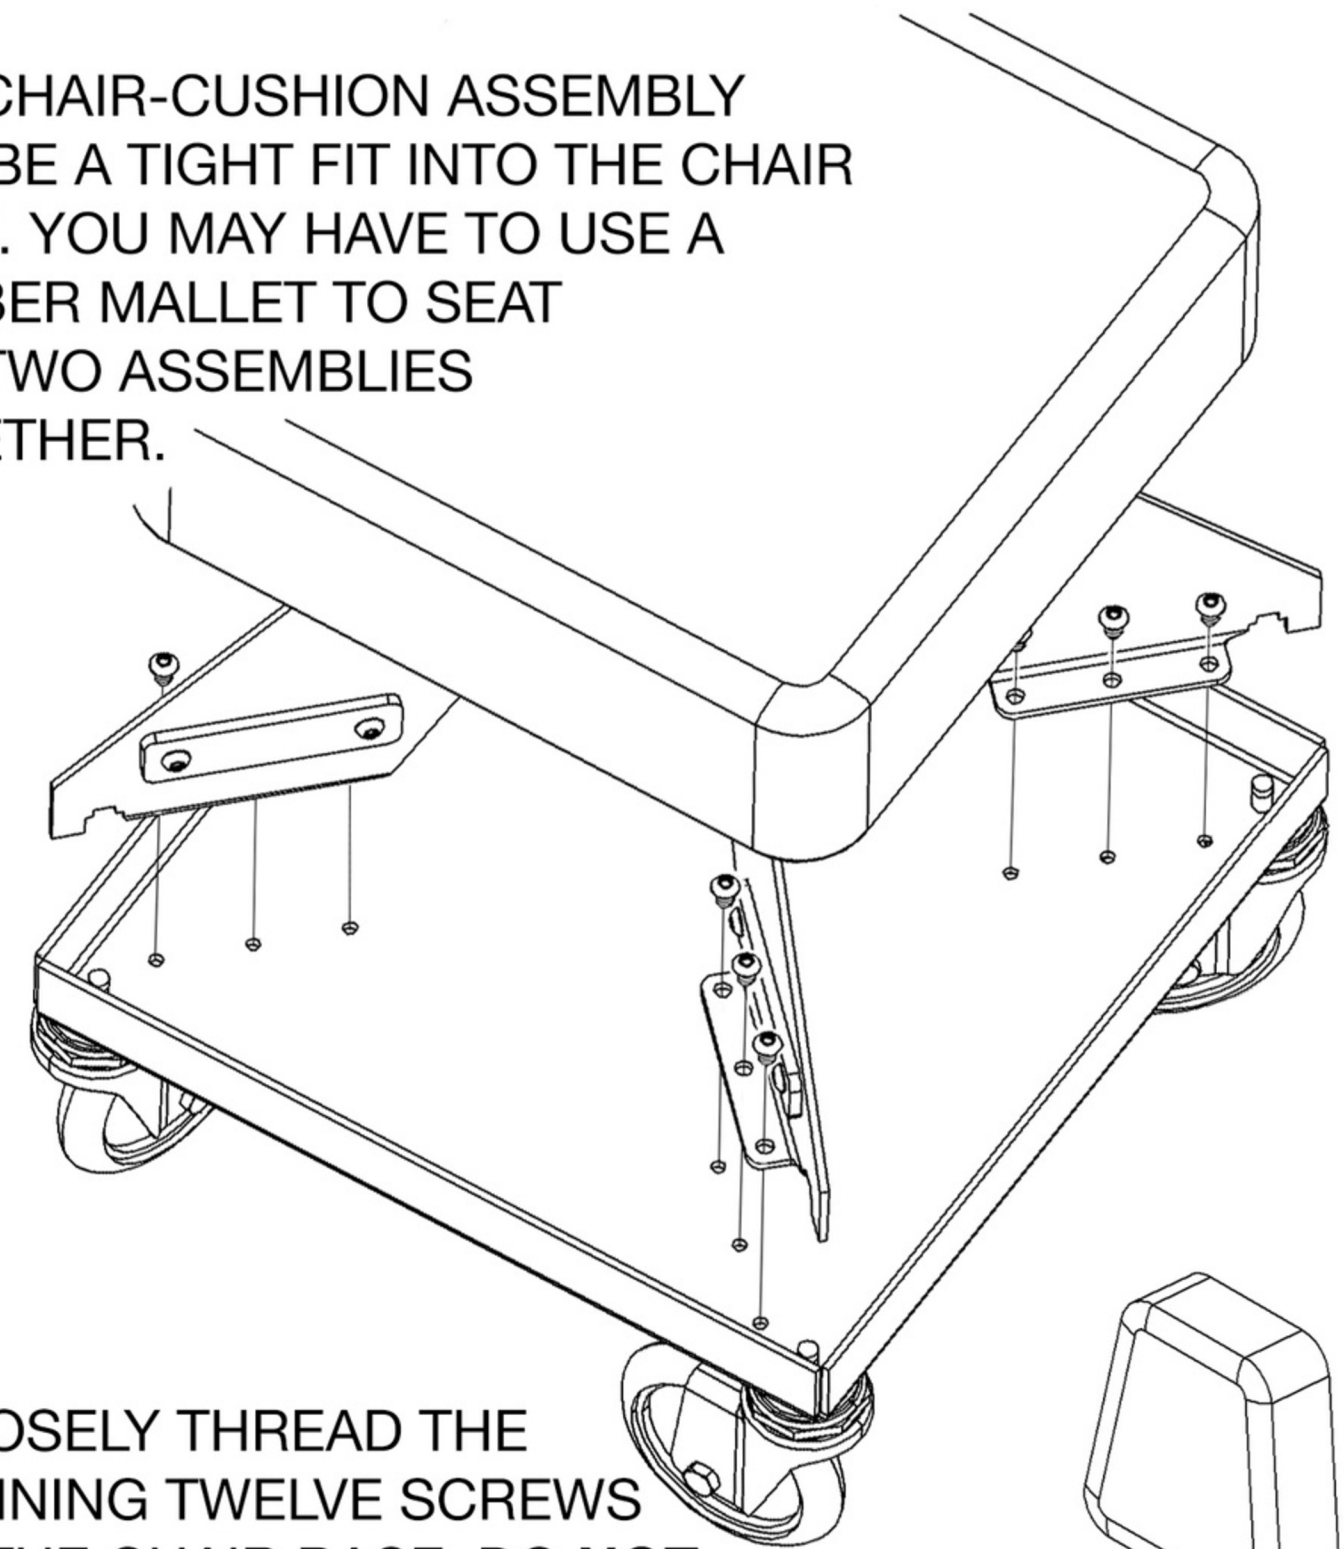

9. LOOSELY THREAD THE REMAINING TWELVE SCREWS INTO THE CHAIR BASE. DO **NOT** FULLY TIGHTEN THE SCREWS UNTIL ALL TWELVE SCREWS ARE THREADED IN.

10. THE ASSEMBLY OF YOUR CHAIR IS COMPLETE. ENJOY YOUR FAST FREDDY CHAIR!

